


Narrow Pylon Surgical Guide Drilling Protocol



Implant $\text{Ø}3.0 \times 10$

Narrow Sleeve Offset 13

#

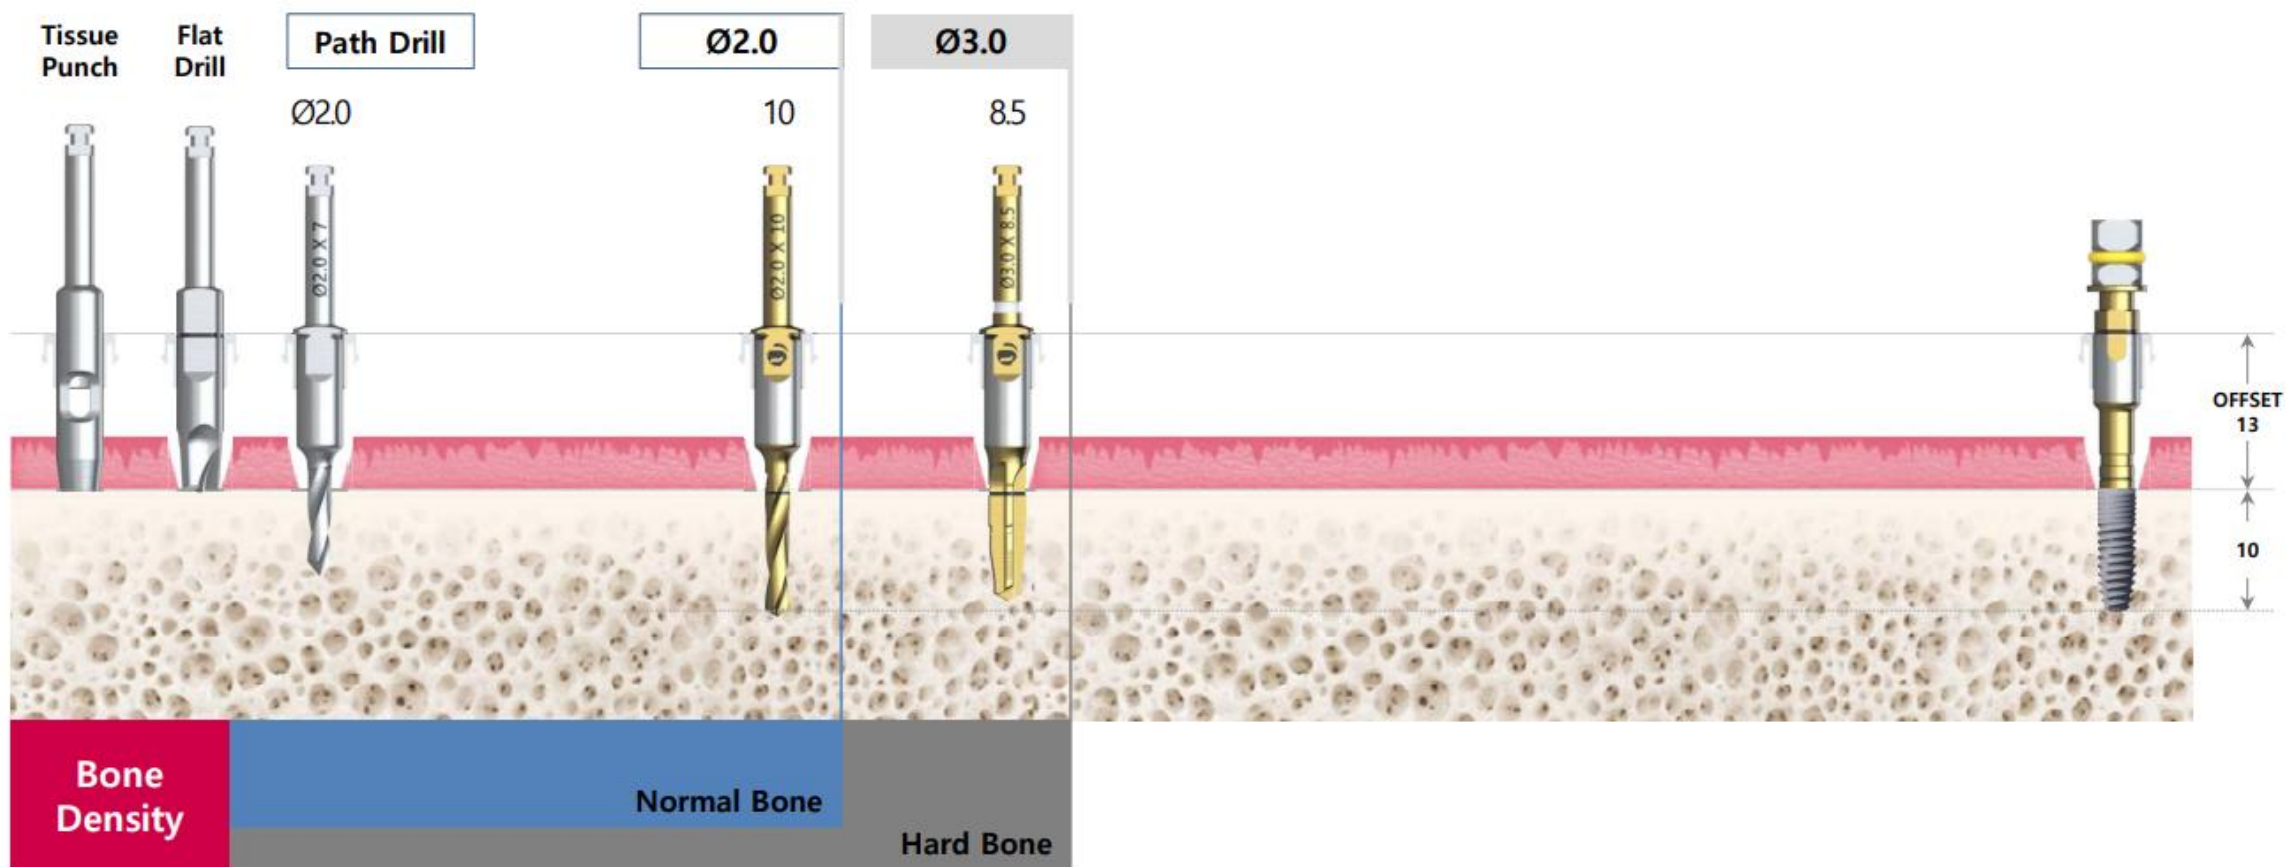


Narrow Pylon Surgical Guide Drilling Protocol



Implant $\text{Ø}3.0 \times 11.5$

Narrow Sleeve Offset 13

#

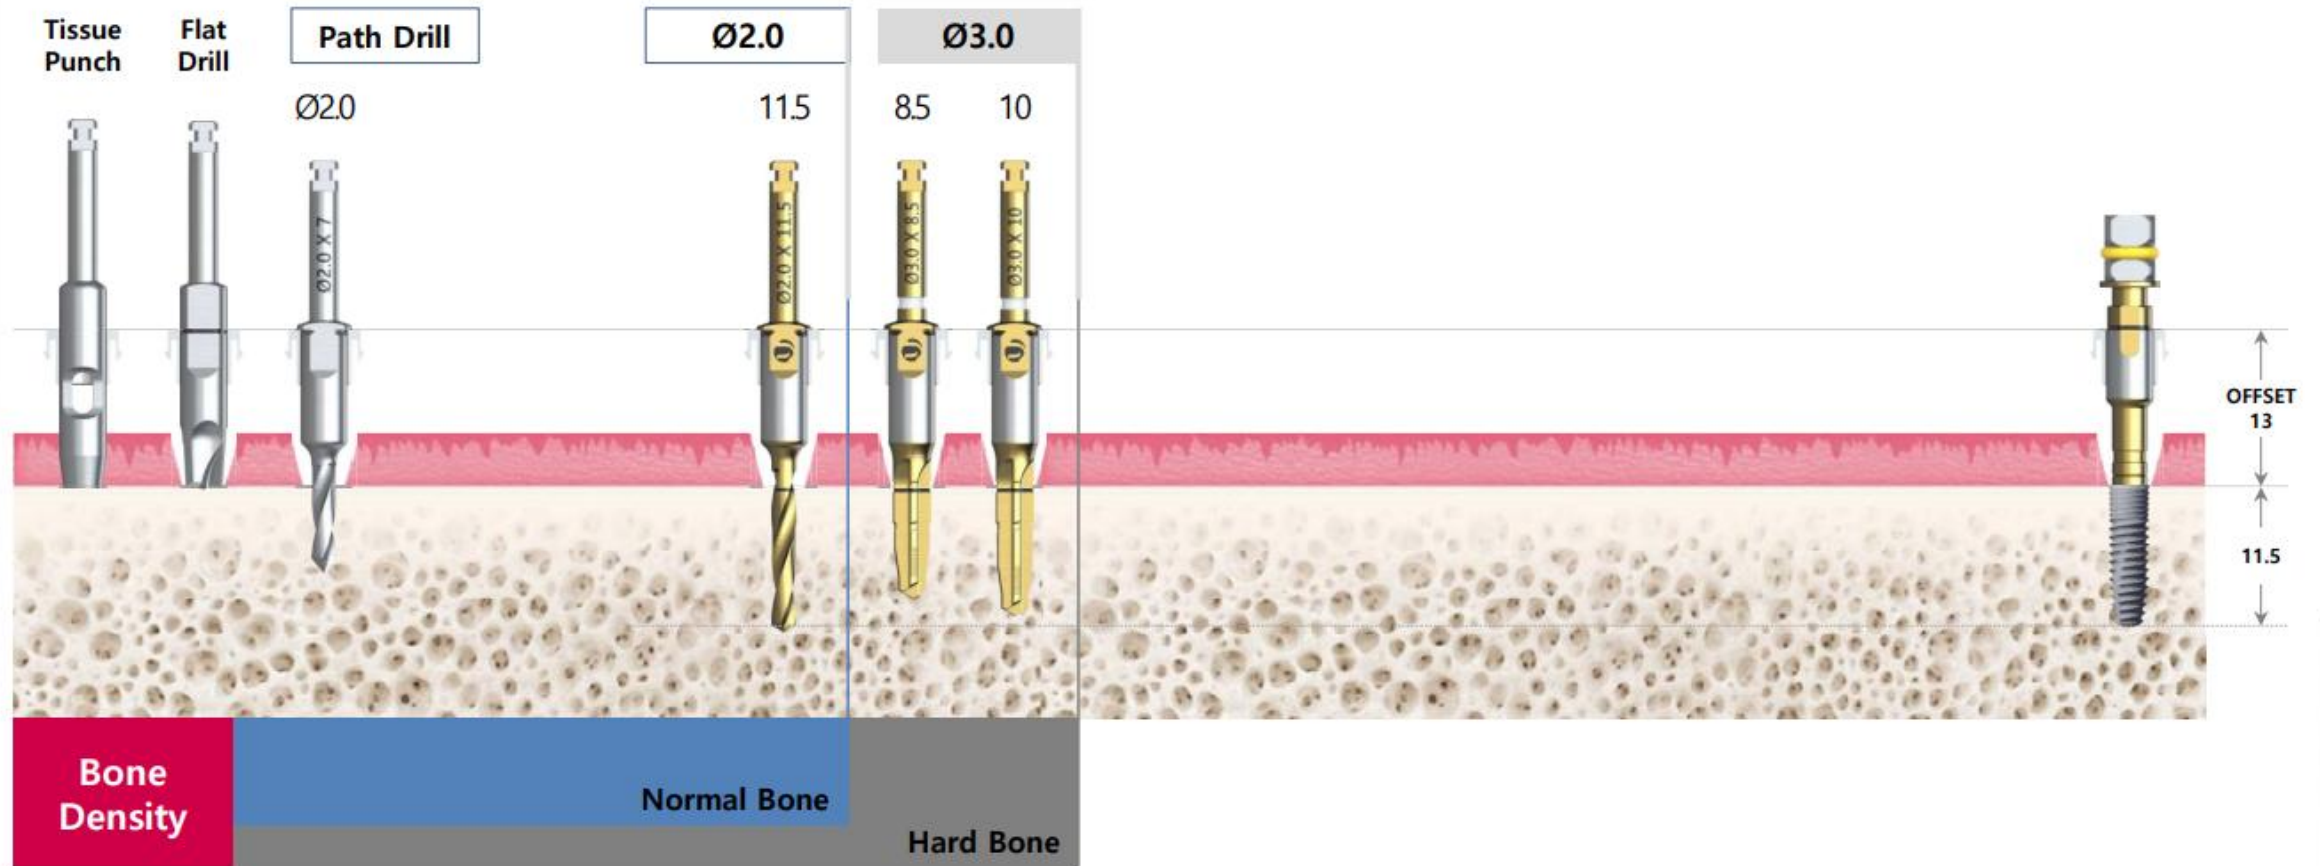


Narrow Pylon Surgical Guide Drilling Protocol



Implant $\text{Ø}3.0 \times 13$

Narrow Sleeve Offset 13


#

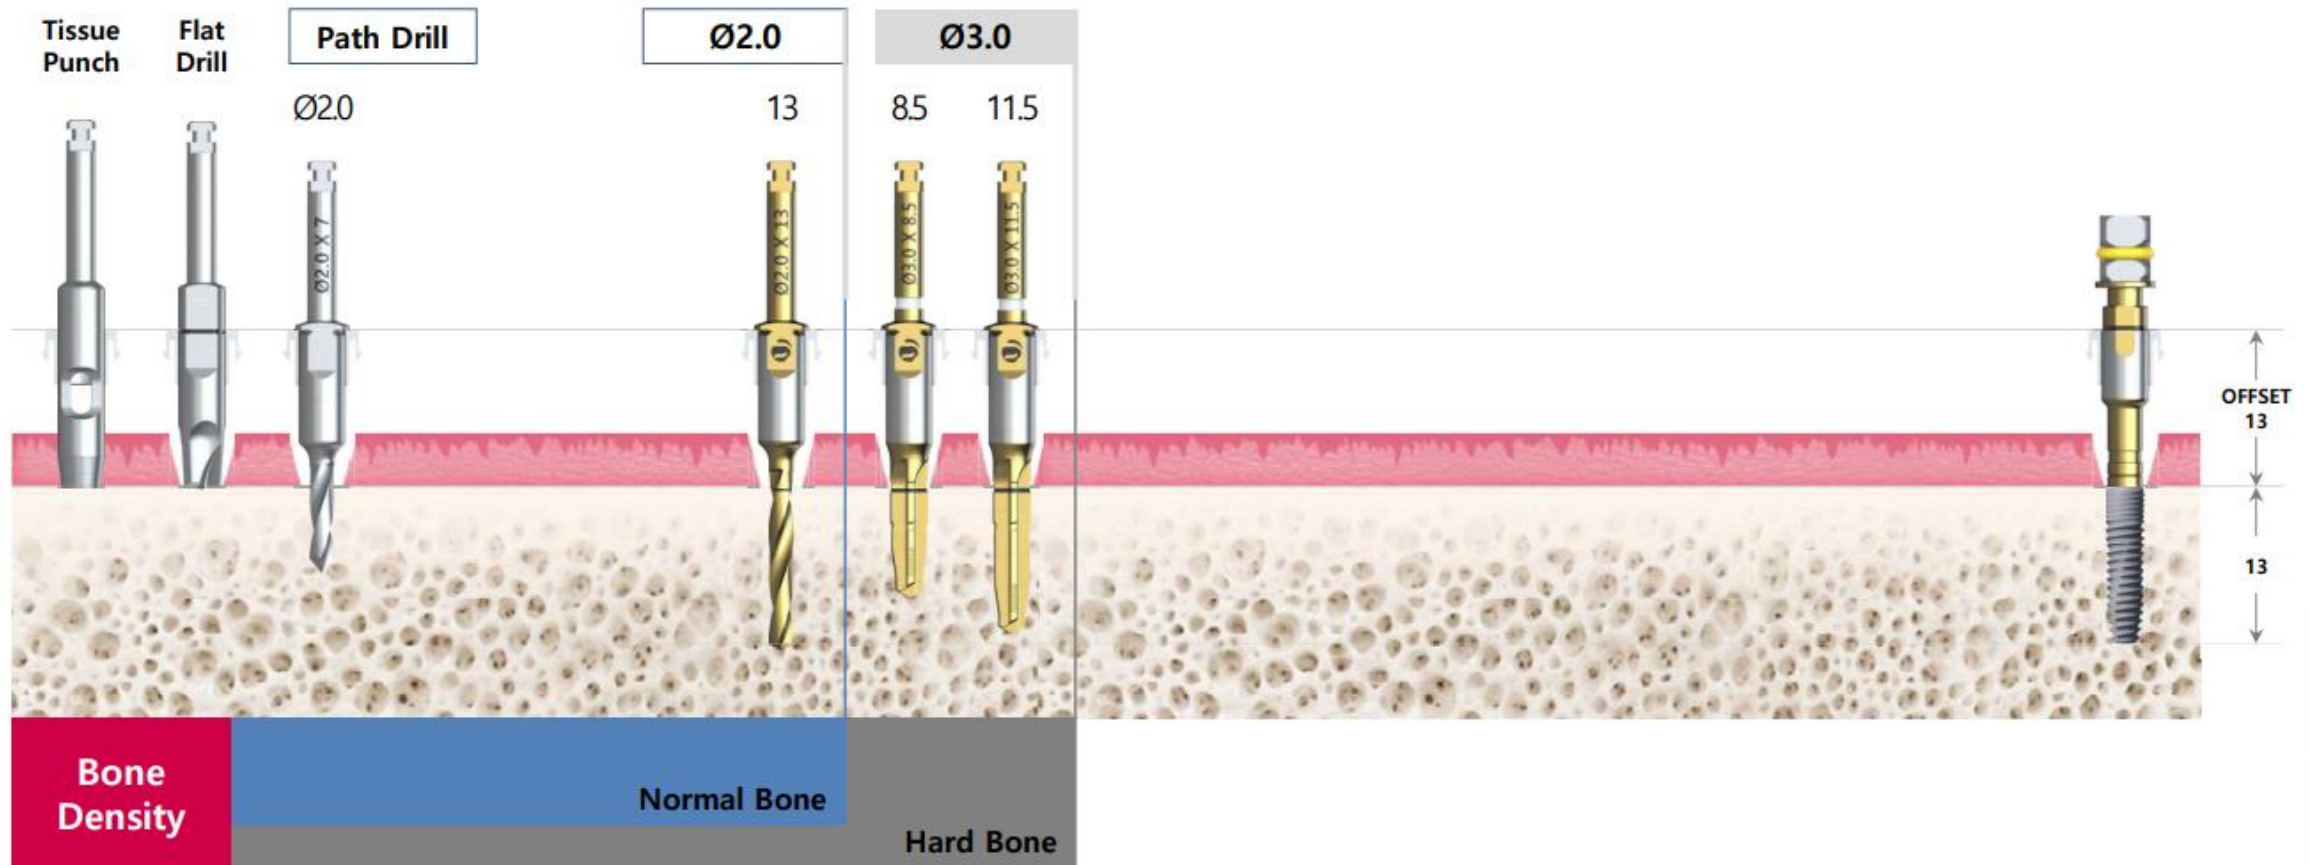

Implant $\text{Ø}3.0 \times 14.5$

Narrow Sleeve Offset 13

#

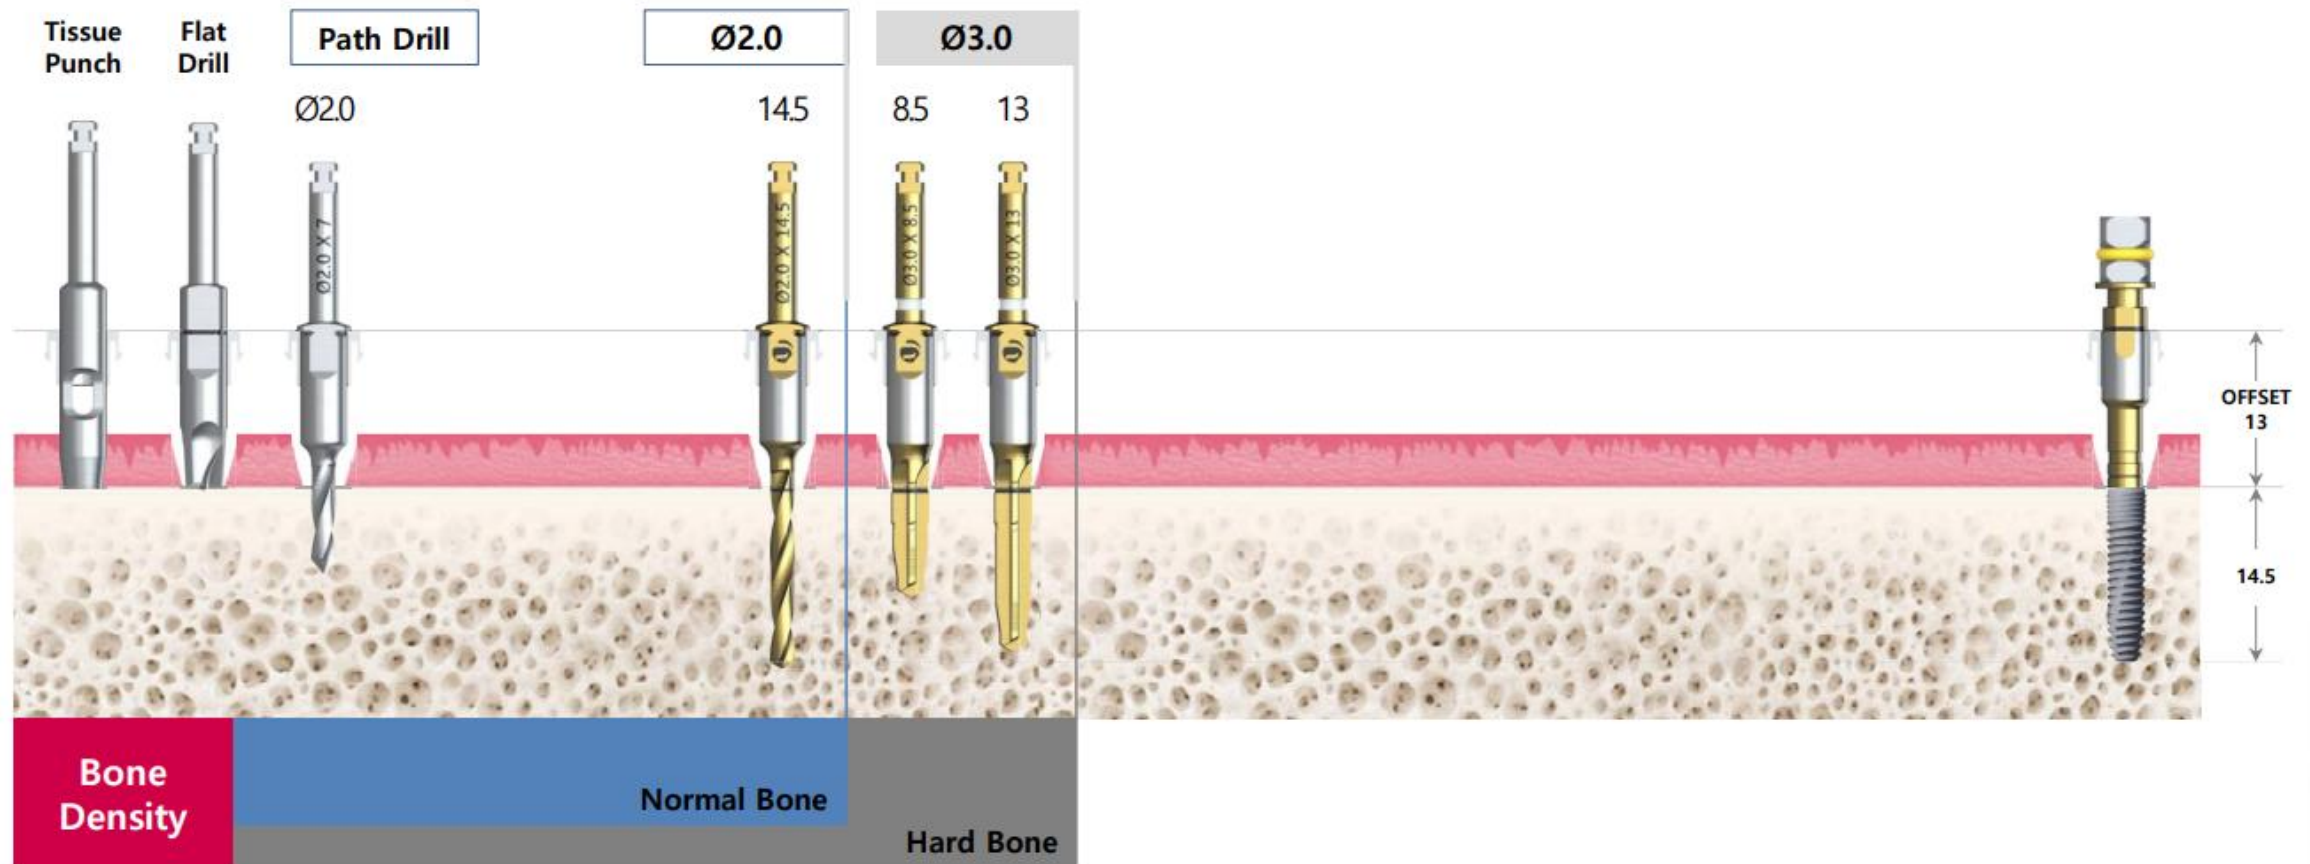


Narrow Pylon Surgical Guide Drilling Protocol



Implant $\text{Ø}3.5 \times 8.5$

Narrow Sleeve Offset 13

#

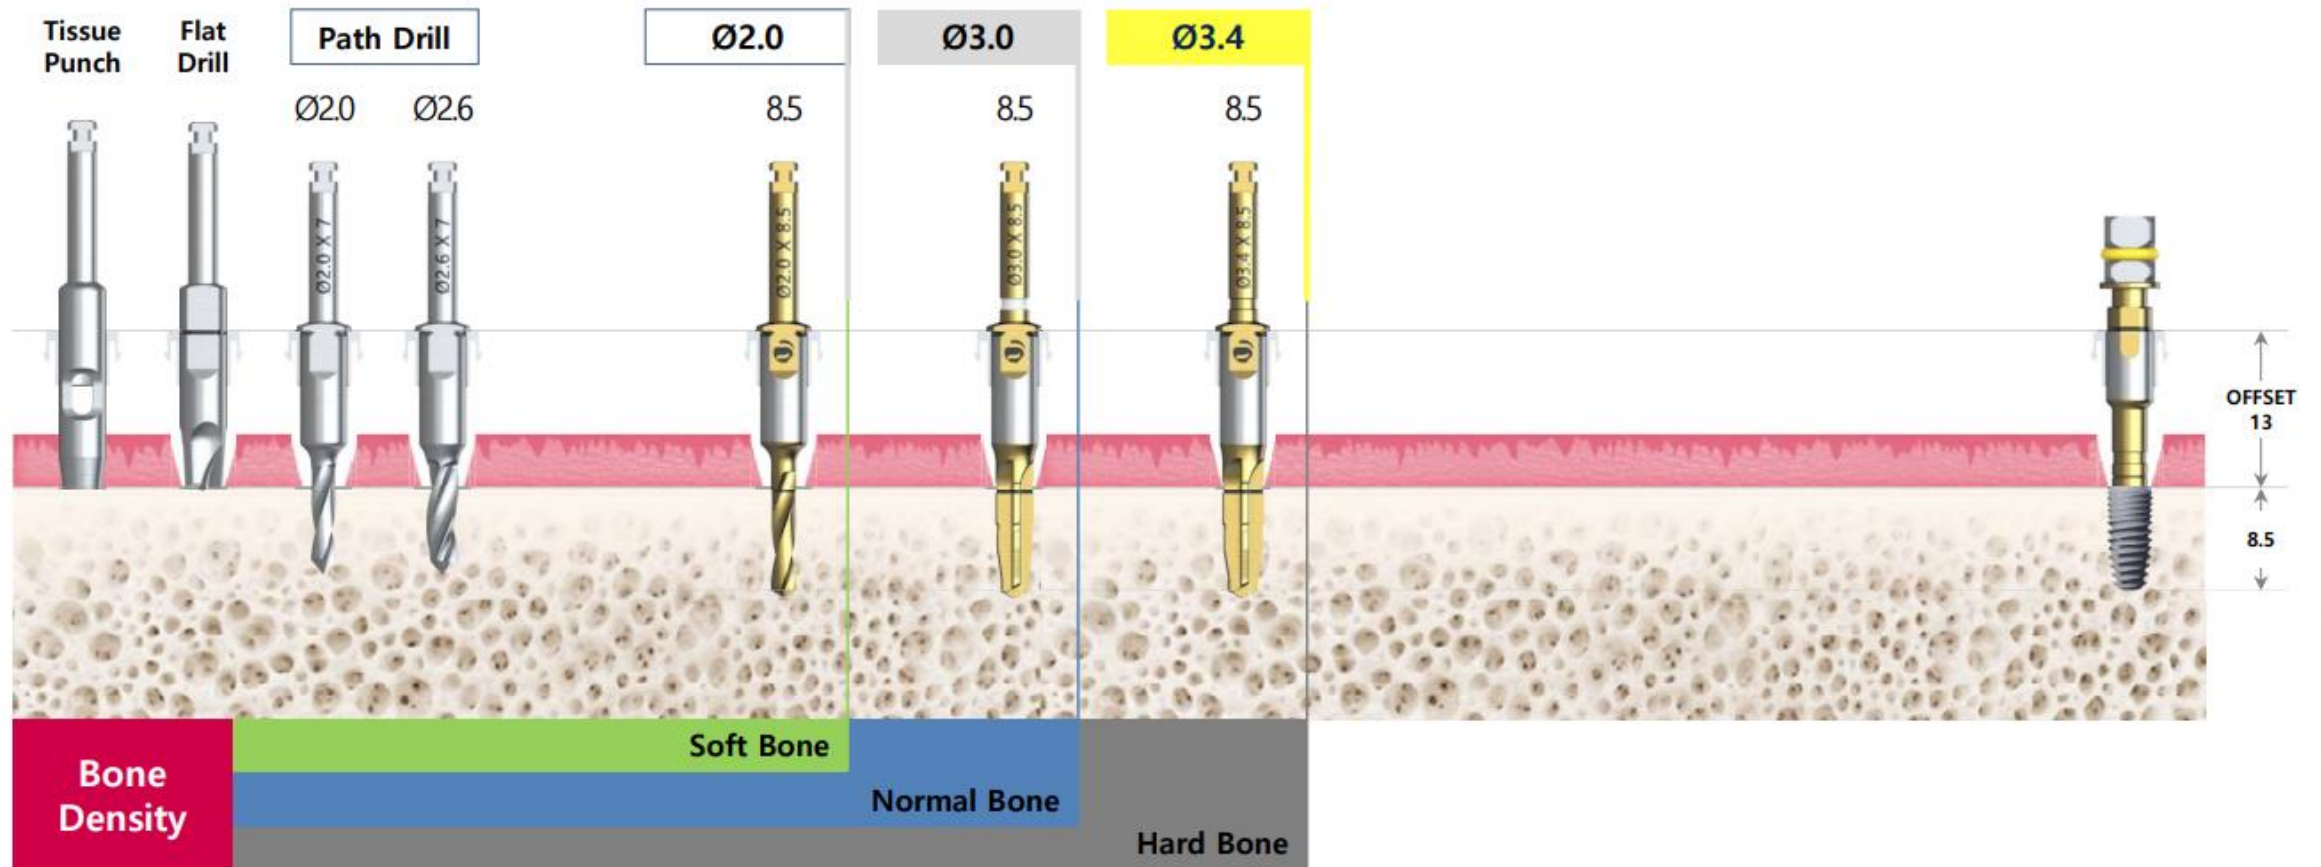


Narrow Pylon Surgical Guide Drilling Protocol



Implant $\text{Ø}3.5 \times 10$

Narrow Sleeve Offset 13

#

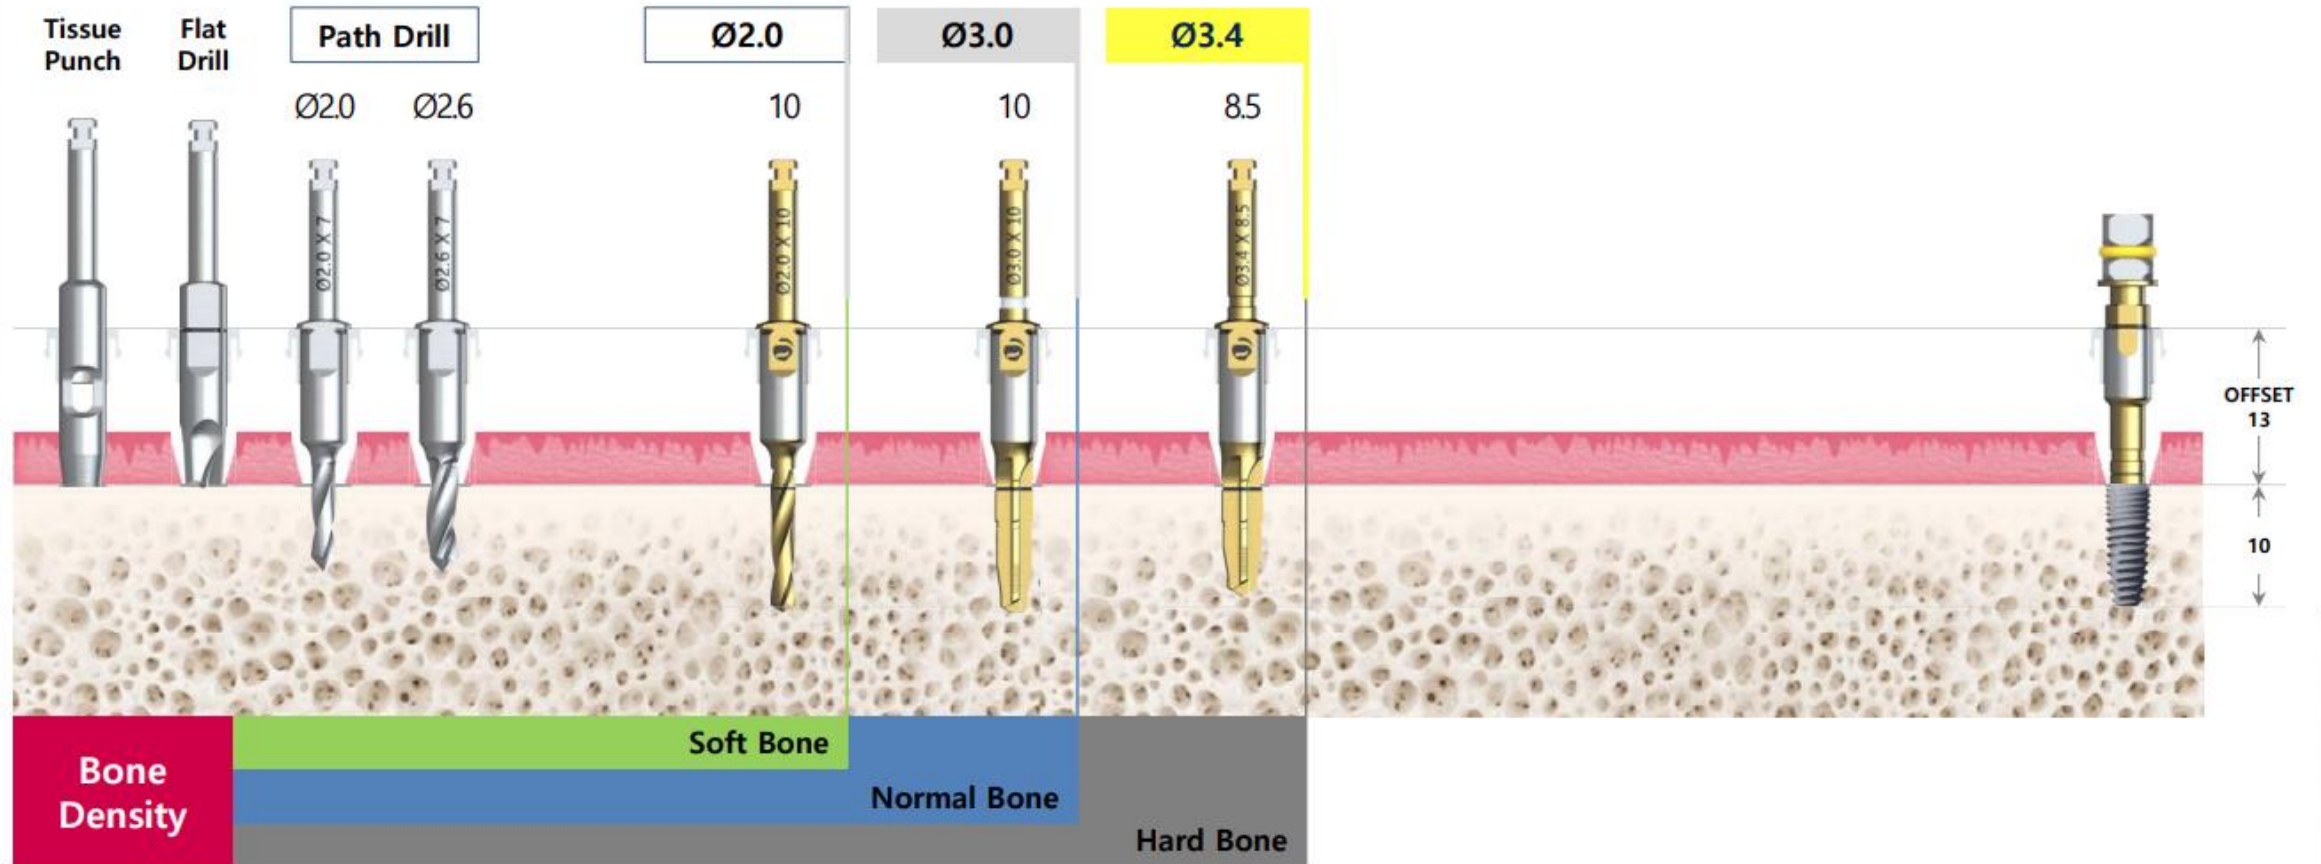


Narrow Pylon Surgical Guide Drilling Protocol



Implant $\varnothing 3.5 \times 11.5$

Narrow Sleeve Offset 13


#

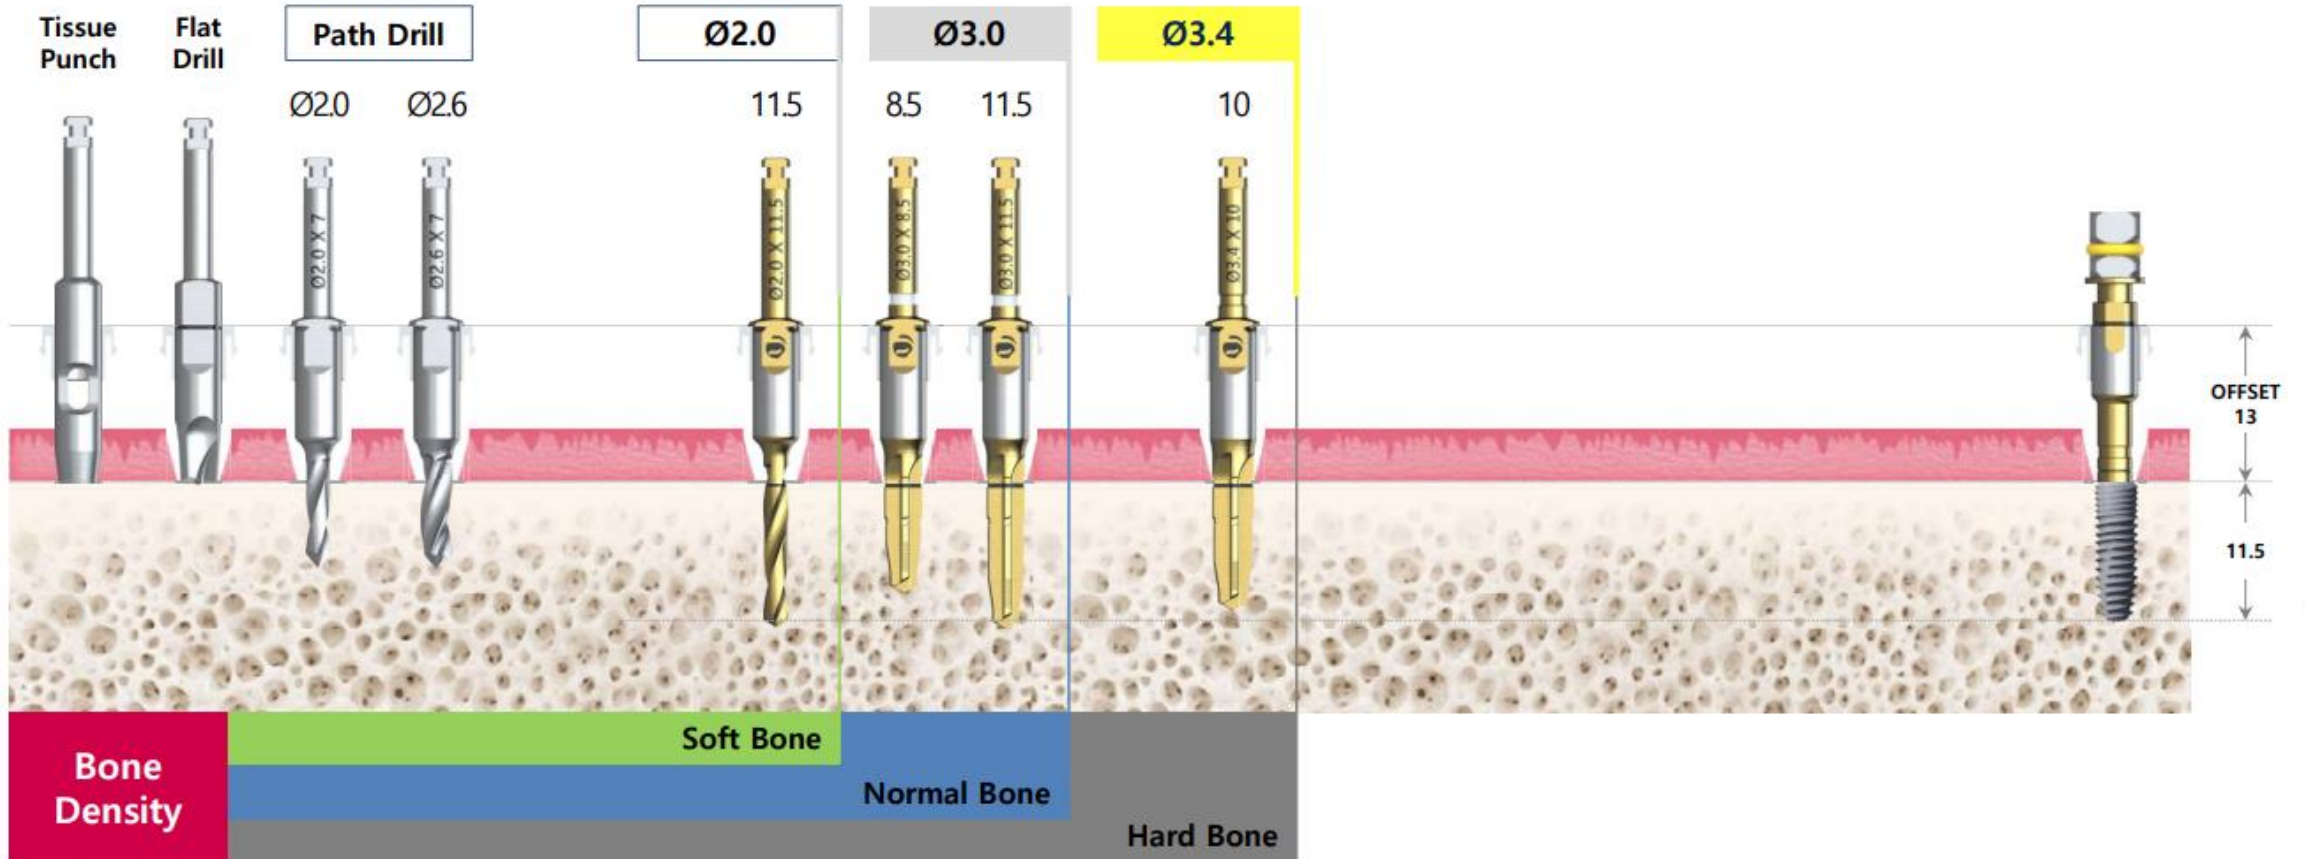

Implant $\text{Ø}3.5 \times 13$

Narrow Sleeve Offset 13

#

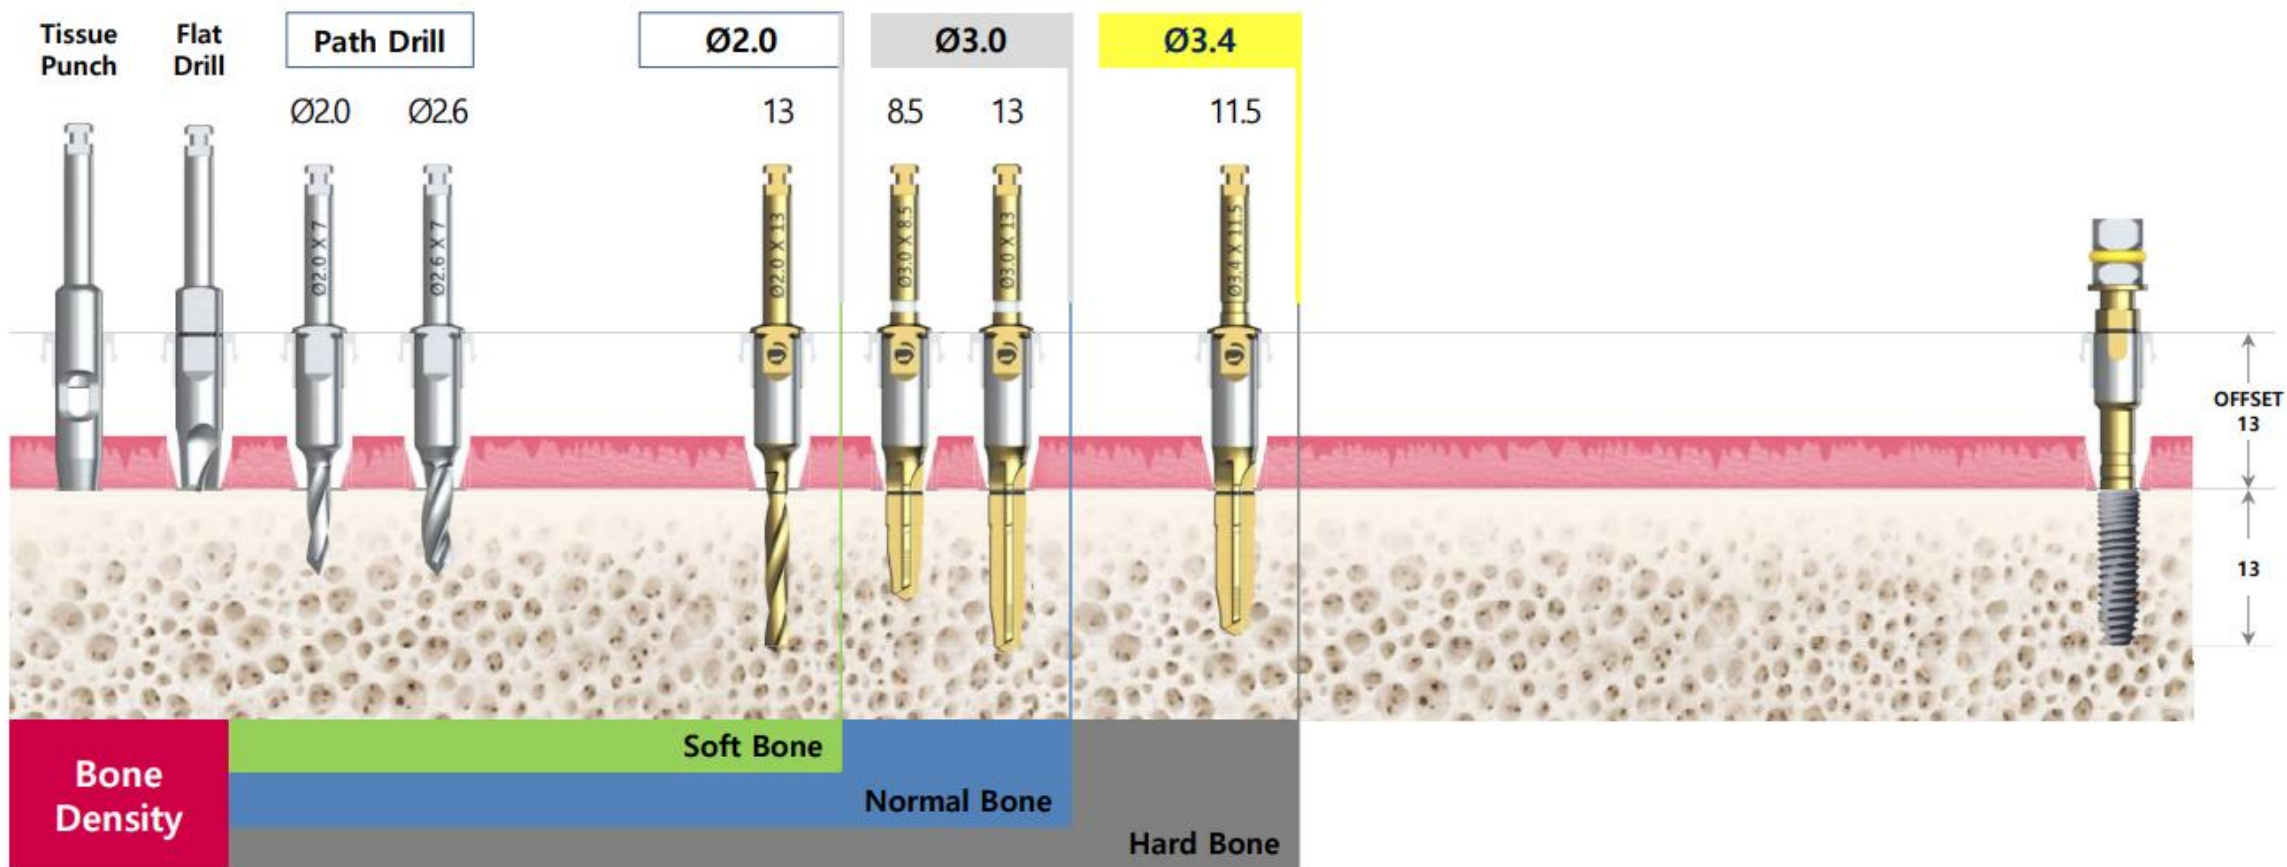

Implant $\text{Ø}3.5 \times 14.5$

Narrow Sleeve Offset 13

#

